


- Note 1:**
- 10-32 Clearance - 13/64"
 - 1/4-20 Clearance - 17/64"
 - Only minimal amount of mounting holes are necessary

Note 2:
 May drill clearance holes for nuts or cut out indicated area

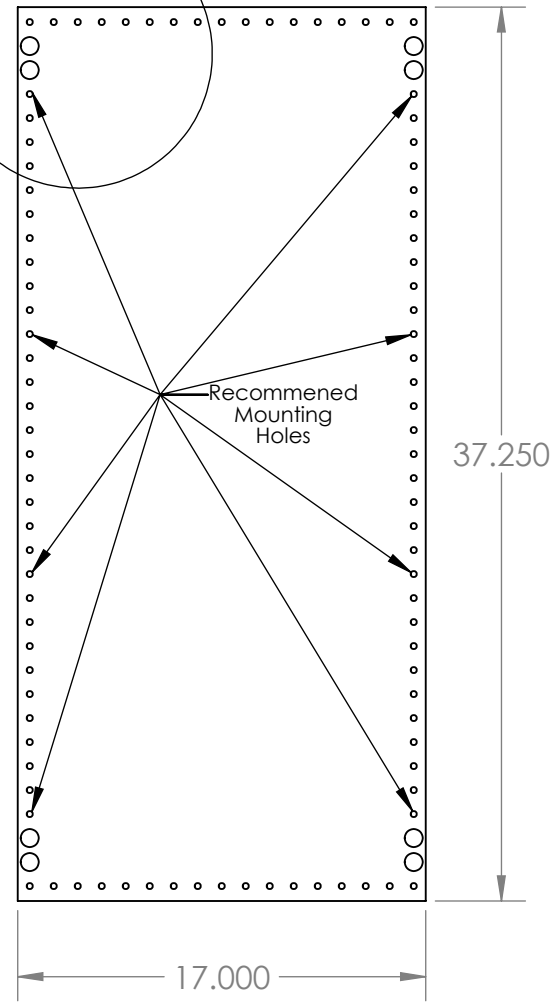

<h1>Kitbot on Steroids</h1>	
Wooden Baseboard	
simbotics.org/kitbot	

Material: 1/2" Plywood