


- Note 1:**
- 10-32 Clearance - 13/64"
  - 1/4-20 Clearance - 17/64"
  - Only minimal amount of mounting holes are necessary

**Note 2:**  
 May drill clearance holes for nuts or cut out indicated area

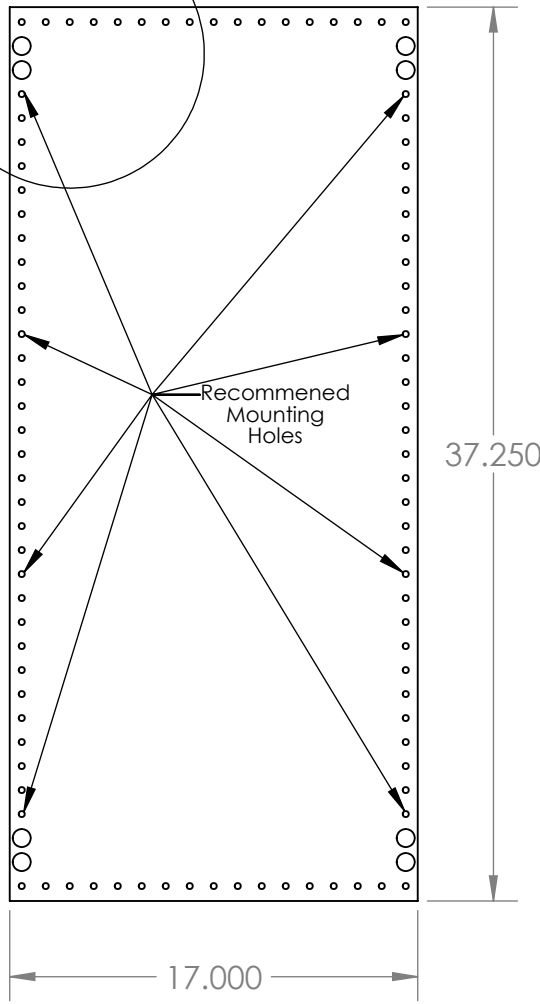

# Kitbot on Steroids

Wooden Baseboard

Material: 1/2" Plywood

[simbotics.org/kitbot](http://simbotics.org/kitbot)